

1500 Standard 3 Programming

- 1) Print all setup (for reference)
- 2) Clear NV Ram
 - a) Power Cycle ATM holding 2nd function key on right



- b) Press "YES" 4th function key on left
 - c) Enter master Password
- 3) Enter Operator Function
- 4) Enter password (555555)
- 5) Go to Customer setup

6) Press 4th function key on left



7) Select Processor Menu opens




8) Select Standard 3

9) Once Standard 3 has been selected, press "CANCEL" to return

10) ATM is now setup for Standard 3. Now you can go about programming machine.

Program ATM

- 1) Enter Customer specific information.
- 2) Select STD3 options
- 3) Enable "status monitoring"
- 4) Enable "comm. Header"

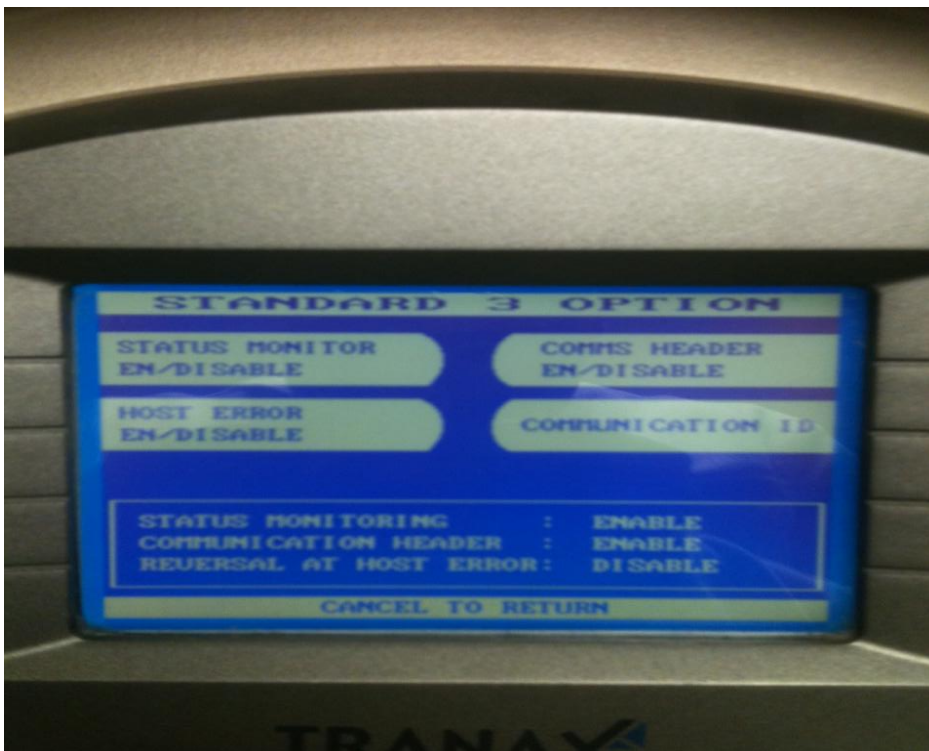

- 5) Select "Communication ID"
- 6) Enter "XSTRMX"

